

# Kingfisher Vinyl Flooring

## Glue Down LVT Installation



### Installation Overview

- The main difference between floating and glue down method is the additional spreading of the glue on the subfloor.
- Do not spread glue on more area than you can work with.
- An area the size of two installed rows is a good starting area.
- The steps described in the floating installation are the same for glue down installation.
- Always follow adhesive manufacturer's instruction.

### Installation Procedure

- Spread the glue width of two initial starter rows.
- Install the first row of planks.
- Install the second row. Ensure you are locking the edges.
- Spread another section of glue.
- Install another two rows.
- Repeat spreading glue/install planks cycle until all flooring has been installed.

### Technical Support

For installation information and technical questions not covered in this installation guide, please contact our Technical Support. E-mail: [support@cnkingfisher.com](mailto:support@cnkingfisher.com)